


## Иллюстрация Engine

---

Ссылка	Кол-во	Код артикула	Наименование
1	1	2318817R	Air purge
2	1	61200078R	Cylinder cover
3	2	4191069B	Plate
4	2	3801065R	Screw
5	2	3819036R	Washer
6	1	3916006	Washer
7	1	61200061R	Muffler
8	1	61200063R	Deflector
9	1	3055115	Spark plug
10	1	61200007AR	Gasket
11	1	003300015R	Piston ring
12	2	004900061R	Ring
13	1	50110047R	Piston pin
14	1	61212004A	Piston assy �38
15	1	61212005A	Compl. cylinder
16	1	50110044R	Bearing
17	2	50110043R	Spacer
18	1	61200001R	Crankshaft
19	1	61200064R	Stopper
20	1	61200113AR	Crankcase assy
21	1	3860096	Screw
22	2	094000006R	Bearing
23	1	61200006R	Gasket
24	2	094000099R	Seal ring
25	4	094000101R	Screw
26	4	3833073R	Washer
27	2	3023008R	Plug
28	1	3916005R	Sealing washer
29	1	3819006	Washer
30	1	3801010R	Screw
31	2	3960030	Screw
32	1	3960069AR	Screw
33	1	61202038R	Gasket set



# Иллюстрация Starter assy and clutch

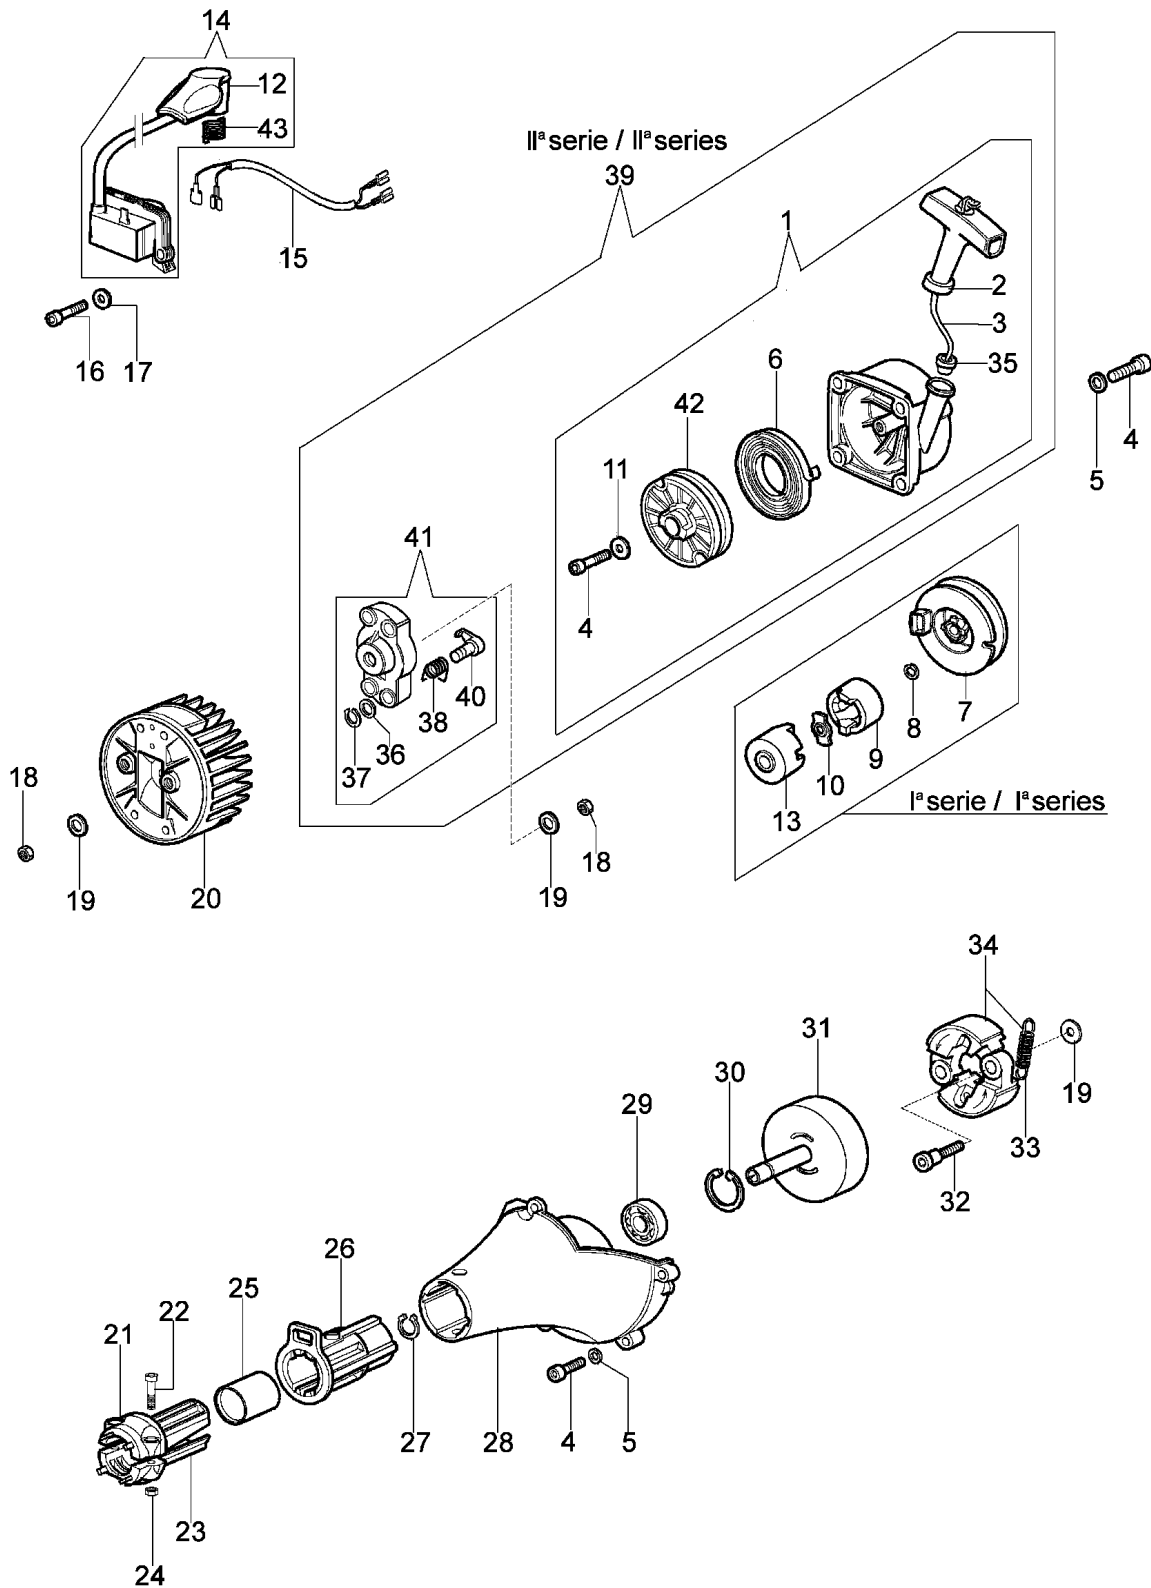

## Иллюстрация Starter assy and clutch

Ссылка	Кол-во	Код артикула	Наименование
1	1	61200259R	Starter assy
2	1	61200015R	Starter handle
3	1	56520087R	Starter rope
4	6	3801010R	Screw
5	4	3916005R	Sealing washer
6	1	004000132R	Spring
7	1	56520038AR	Pulley
8	1	3027005R	Ring
9	1	56520039A	Shaft joint
10	1	56520040A	Plate
11	1	3918020R	Washer
12	1	61200012R	Spark plug cap
13	1	61200062AR	Clutch driver
14	1	61250015BR	Ignition coil
15	1	61250047R	Cable
16	2	3801013R	Screw
17	2	3819006	Washer
18	1	3912009	Nut
19	1	3818011A	Washer
20	1	61250014AR	Flywheel
21	1	61200059R	Adaptor
22	2	3801015	Screw
23	1	61200060R	Adaptor
24	2	3914003R	Nut
25	1	4161364	Bushing
26	1	4161428	Sleeve
27	1	3024015	Seeger
28	1	61200071AR	Starter case
29	1	3035042R	Bearing
30	1	3025022	Ring
31	1	61200032R	Clutch drum
32	1	4191027ER	Pin
33	1	4191028R	Spring
34	1	4191153AR	Clutch
35	1	072700089	Bushing
36	2	3064010	Washer
37	2	3024007	Ring
38	2	4191017A	Spring
39	1	61200261	Starter kit
40	2	4191016R	Pawl
41	1	61252002R	Clutch driver
42	1	4191018AR	Starter pulley
43	1	61200067R	Spring

# Иллюстрация Fuel tank and air filter




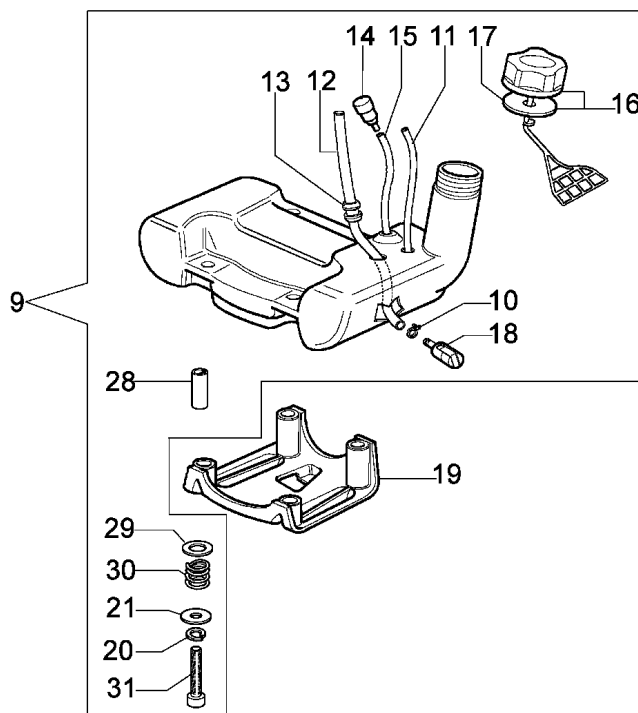
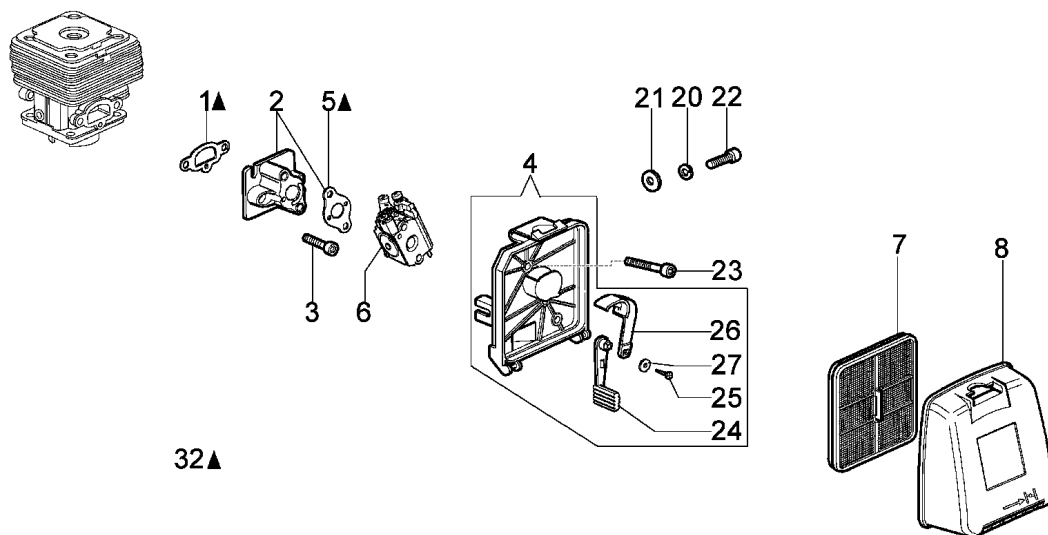


## Иллюстрация Fuel tank and air filter

---

Ссылка	Кол-во	Код артикула	Наименование
1	1	61200019AR	Gasket
2	1	61200198	Insulator
3	2	3801015	Screw
4	1	61212062	Compl. support
5	1	61200196R	Gasket
6	1	2318765R	Carburetor WT-869
7	1	61200025AR	Air filter
8	1	61200075R	Filter cover
9	1	61200028AR	Compl. tank
10	1	4098377	Band
11	1	61200092AR	Hose
12	1	61200093R	Hose
13	1	4161211	Bush
14	1	61070011AR	Breather valve
15	1	61200030AR	Hose
16	1	61070079R	Tank cap
17	1	61070006	Gasket
18	1	094600450R	Fuel filter
19	1	61200057R	Stand
20	5	3819006	Washer
21	5	3918005	Washer
22	1	3801013R	Screw
23	2	61052009B	Screw
24	1	61200024R	Lever
25	1	3960069AR	Screw
26	1	61200023AR	Lever
27	1	4120070	Washer
28	4	61200128R	Spacer
29	4	3916008R	Washer
30	1	61200129R	Spring
31	4	3801016R	Screw
32	1	61202038R	Gasket set

# Иллюстрация Transmission

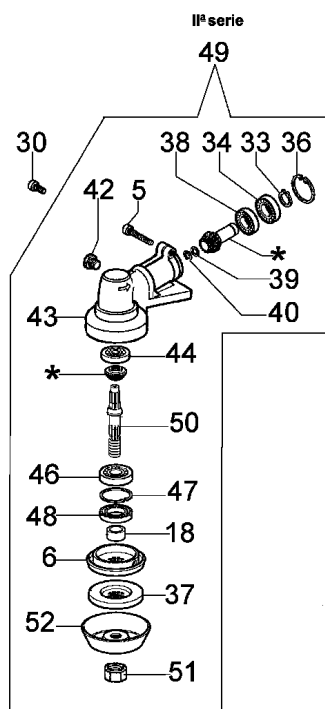
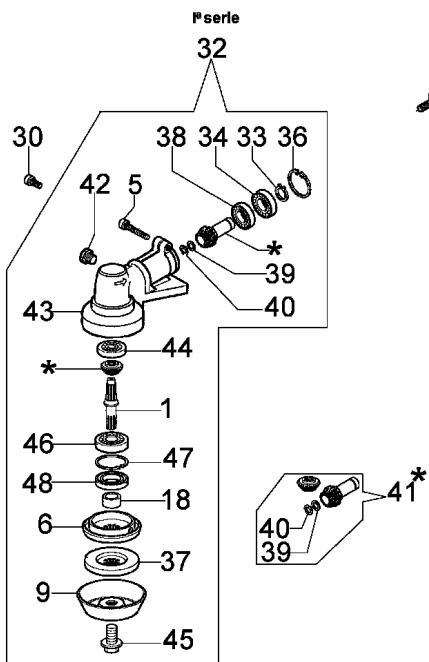
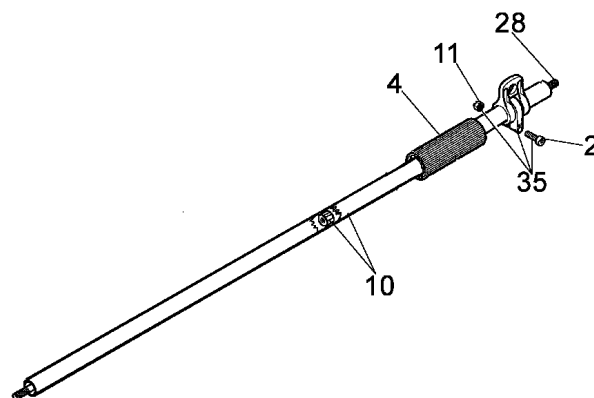
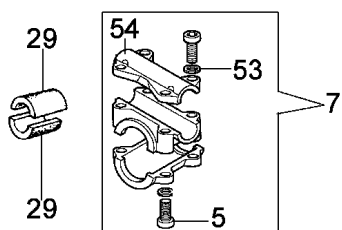
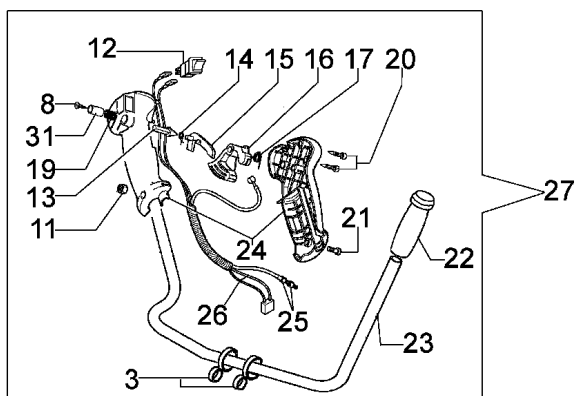


## Иллюстрация Transmission

Ссылка	Кол-во	Код артикула	Наименование
1	1	61040106A	Pin
2	2	3801015	Screw
3	2	61170132R	Grommet
4	1	4160262B	Knob
5	5	3801013R	Screw
6	1	61040145R	Hub
7	1	074000183AR	Clamp
8	1	3960021	Screw
9	1	4100456R	Guard
10	1	61202023R	Tube $\phi$ 26
11	8	3914003R	Nut
12	1	2317021R	Switch
13	1	4138358R	Button
14	1	4138360R	Spring
15	1	4174246AR	Lever
16	1	4174245CR	Throttle lever
17	1	4138361R	Spring
18	1	61040066	Spacer
19	1	4100098BR	Spring
20	2	3960029	Screw
21	1	3801016R	Screw
22	1	61040140R	Knob
23	1	61200049R	Handlebar
24	1	61040131R	Handle
25	1	61200047R	Throttle cable
26	1	61200046R	Cable
27	1	61200048R	Handlebar
28	1	61170075R	Drive shaft
29	2	072700082R	AV-mount
30	1	3901008	Screw
31	1	4138359R	Button
32	1	61052030BR	Bevel gear $\phi$ 26
33	1	3024012	Ring
34	1	3035230	Bearing
35	1	4161619R	Band d.26
36	1	3025019	Ring
37	1	4179089R	Flange
38	1	3034008	Bearing
39	1	4138311A	Ring
40	1	3025009	Ring
41	1	61040132	Gear set
42	1	61040071R	Cap
43	1	61050013R	Gear case
44	1	3034218	Bearing
45	1	61040074AR	Screw
46	1	3034012R	Bearing



# Иллюстрация Transmission

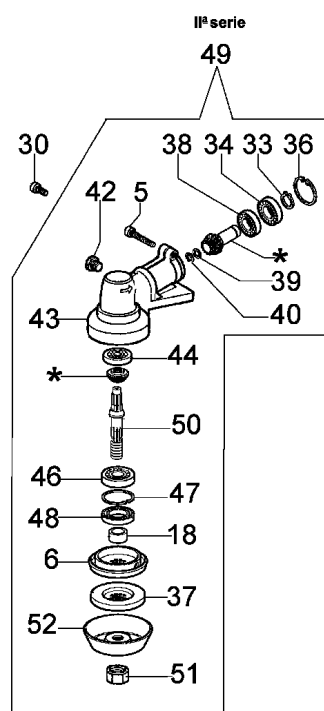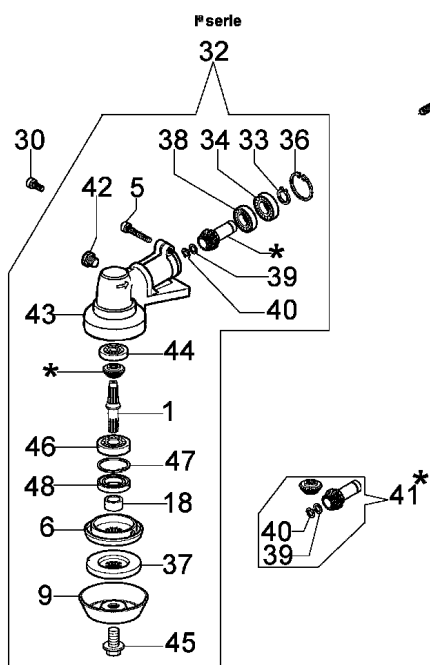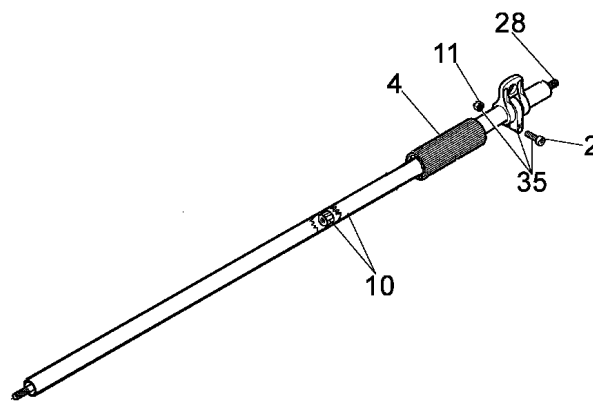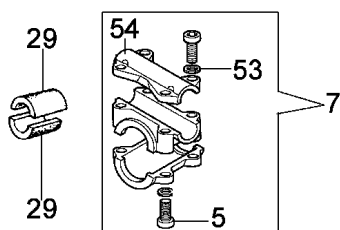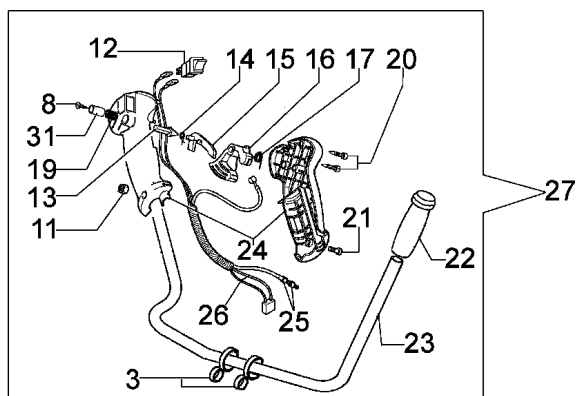


## Иллюстрация Transmission

---

Ссылка	Кол-во	Код артикула	Наименование
47	1	3025022	Ring
48	1	3050018R	Seal ring
49	1	61250053R	Bevel gear $\phi 26$
50	1	61250054R	Pin
51	1	61110075R	Nut
52	1	61110074R	Guard
53	2	3819006	Washer
54	1	072700264CR	Clamp

## Zama mod.C1Q-E12 compl. p.n. 2320051R

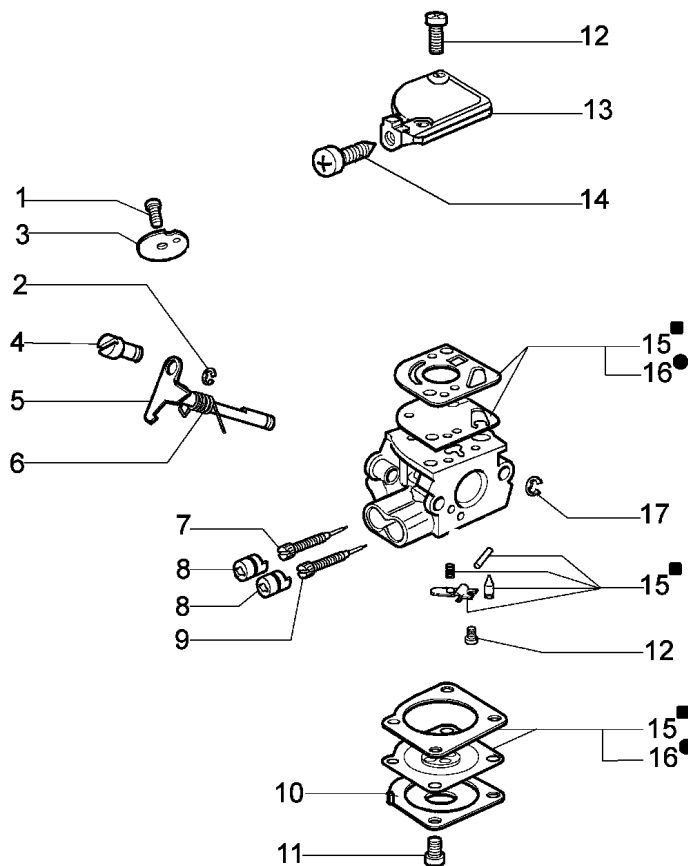


- 16 ● KIT MENBRANE & GUARNIZIONI  
DIAPHRAGM & GASKET SET
- 15 ■ KIT RIPARAZIONE  
REPAIR KIT

## Иллюстрация Carbuettor C1Q-E12 (till 30/09/07)

---

Ссылка	Кол-во	Код артикула	Наименование
1	1	2318388	Screw
2	1	2318387	Ring
3	1	2318872	Shutter
4	1	2318412	Hooking spring
5	1	2318689	Shaft
6	1	2318528	Spring
7	1	2318696	Screw H
8	2	2318687	Caps-lock
9	1	2318697	Screw L
10	1	2318880	Cover
11	2	2318522	Screw
12	2	2320053	Screw
13	1	2320052	Cover
14	1	2318876	Screw
15	1	2318886	Repair kit
16	1	2318885	Diaphragm set
17	1	2318535	Ring

### Walbro WT-869







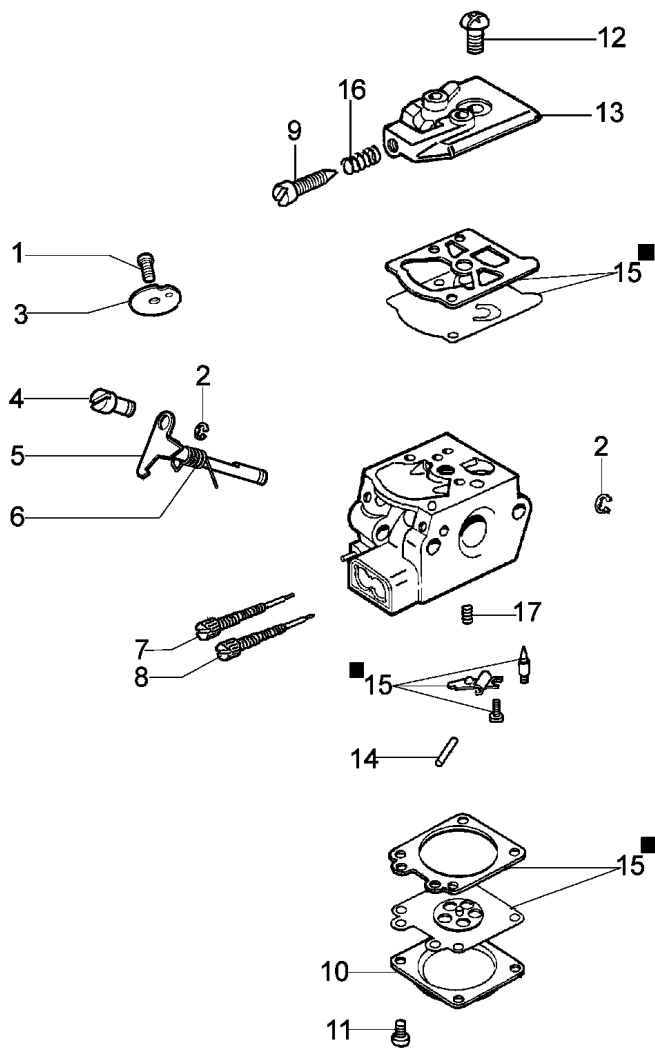


15 ■ KIT RIPARAZIONE  
REPAIR KIT

## Иллюстрация Carbuirettor WT-869

---

Ссылка	Кол-во	Код артикула	Наименование
1	1	50010141	Screw
2	2	095000164	Ring
3	1	072700211	Shutter
4	1	2318211	Pin
5	1	2318737	Shaft
6	1	072700347	Spring
7	1	2318837	Adjust. screw
8	2	2318687	Caps-lock
9	1	2318631	Adjust. screw
10	1	2318191	Cover
11	4	035000162	Screw
12	1	003300197	Screw
13	1	375100087	Cover
14	1	074000240	Adjust.screw
15	1	2318671	Repair kit
16	1	095000149	Spring
17	1	094600430	Spring

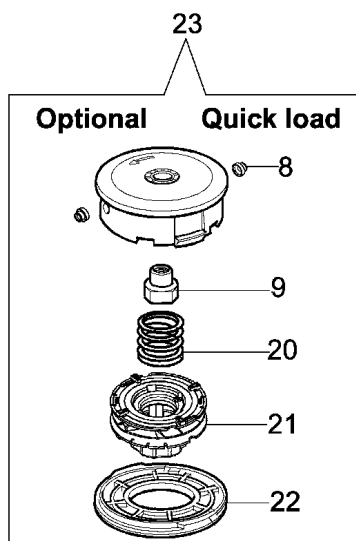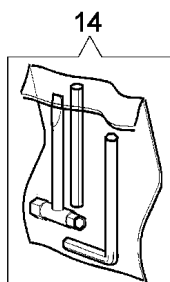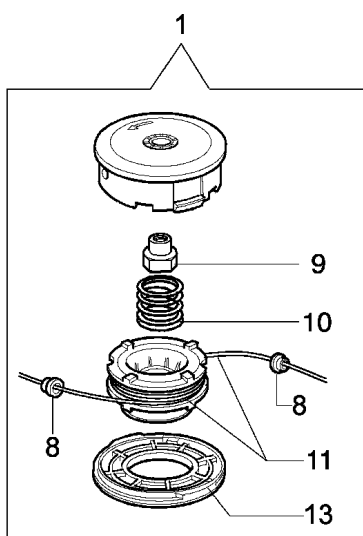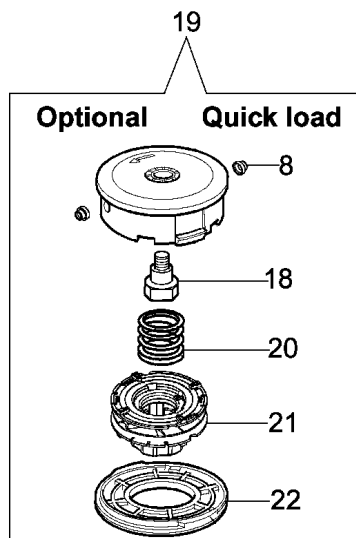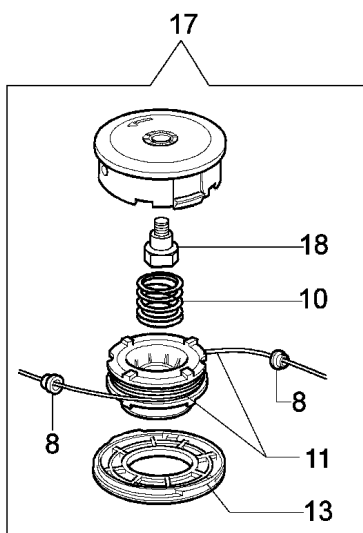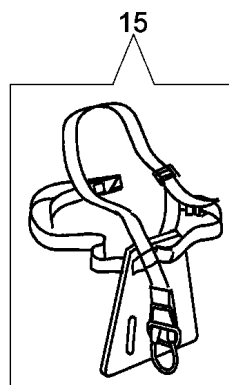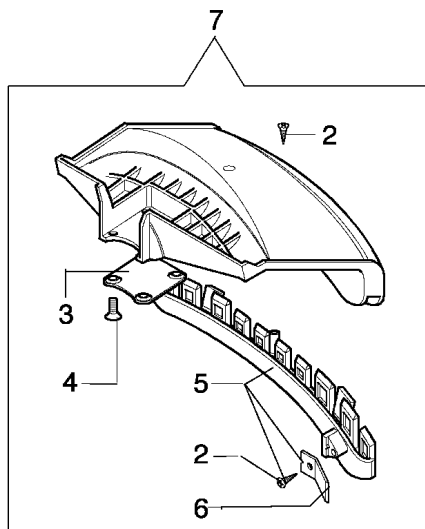

## Иллюстрация Accessories

---

Ссылка	Кол-во	Код артикула	Наименование
1	1	61172019A	Compl. nylon head ć2,4
2	2	3960040R	Screw
3	1	4174278	Plate
4	4	3802004CR	Screw
5	1	4174283A	Skirt w/blade
6	1	4174275R	Blade
7	1	61042011A	Guard assy
8	1	4199005A	Bushing
9	1	61110076	Insert
10	1	4199004	Spring
11	1	4199014A	Nylon spool ć2,4
12	1	4095673AR	Disk
13	1	4199046	Cover
14	1	61052031	Tool kit
15	1	61200106R	Harness
16	1	61212006	Labels kit
17	1	63019021	Compl. nylon head OM ć2,4
18	1	4199008B	Insert
19	1	63019009A	Quick load nylon head ć2,4mm
20	1	4199048R	Spring
21	1	4199049	Nylon spool
22	1	4199046	Cover
23	1	63019011A	Quick load nylon head ć2,4
24	1	4199041R	Nylon spool ć2,4